



ASSEMBLY SEQUENCE:
 STEP1 : ASSEMBLY MTL-P35-ADR AND MTL-35 SERIES.
 STEP2 : ASSEMBLY MTL-P2S45(MTL-PL45) AND MTL-P35-ADR.

INSTRUCTION FOR USE